


Настройка VoIP интерфейса

- Прямой вызов (шлюз-шлюз) H.323/SIP (1/3) -

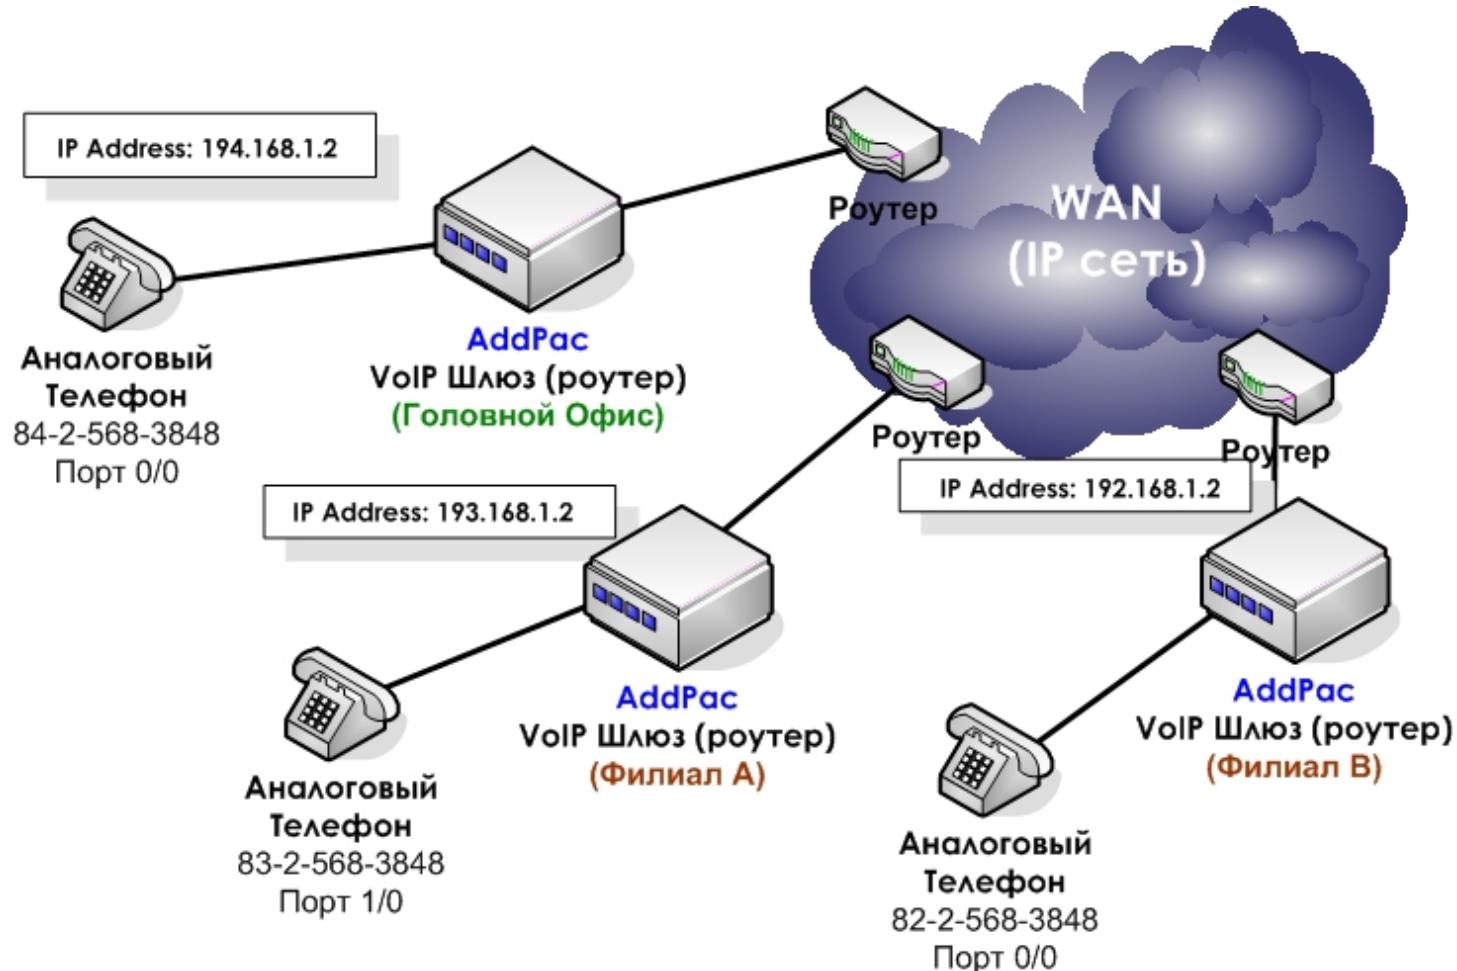

Настройка VoIP интерфейса

- Прямой вызов (шлюз-шлюз) H.323/SIP (2/3)-

H323

Головной Офис

```
!
hostname HO
interface ether0.0 ether0.0
 ip address 194.168.1.2 255.255.255.0
!
route 0.0.0.0 0.0.0.0 194.168.1.1
!
dial-peer voice 0 pots
destination-pattern 8425683848
port 0/0
!
dial-peer voice 1000 voip
destination-pattern 8325683848
session target 193.168.1.2
!
dial-peer voice 1001 voip
destination-pattern 82T
session target 192.168.1.2
```

Филиал А

```
!
hostname A
interface ether0.0
 ip address 193.168.1.2 255.255.255.0
!
route 0.0.0.0 0.0.0.0 193.168.1.1
!
dial-peer voice 0 pots
destination-pattern 8325683848
port 1/0
!
dial-peer voice 1000 voip
destination-pattern 82.....
session target 192.168.1.2
!
dial-peer voice 1001 voip
destination-pattern 8425683848
session target 194.168.1.2
```

Настройка VoIP интерфейса

- Прямой вызов (шлюз-шлюз) H.323/SIP (3/3)-

SIP

Головной Офис

```
!
hostname HO
interface ether0.0
 ip address 194.168.1.2 255.255.255.0
!
route 0.0.0.0 0.0.0.0 194.168.1.1
!
! Pots peer configuration.
!
dial-peer voice 0 pots
 destination-pattern 8425683848
 port 0/0
!
dial-peer voice 1000 voip
 destination-pattern 8325683848
session target 193.168.1.2
session protocol sip
dtmf-relay rtp-2833
```

Филиал А

```
!
hostname A
interface ether0.0
 ip address 193.168.1.2 255.255.255.0
!
route 0.0.0.0 0.0.0.0 193.168.1.1
!
! Pots peer configuration.
!
dial-peer voice 0 pots
 destination-pattern 8325683848
 port 1/0
!
dial-peer voice 1000 voip
 destination-pattern 82.....
 session target 192.168.1.2
session protocol sip
dtmf-relay rtp-2833
```