


Настройка VoIP интерфейса

- Вызов через SIP Proxy Сервер (1/2) -

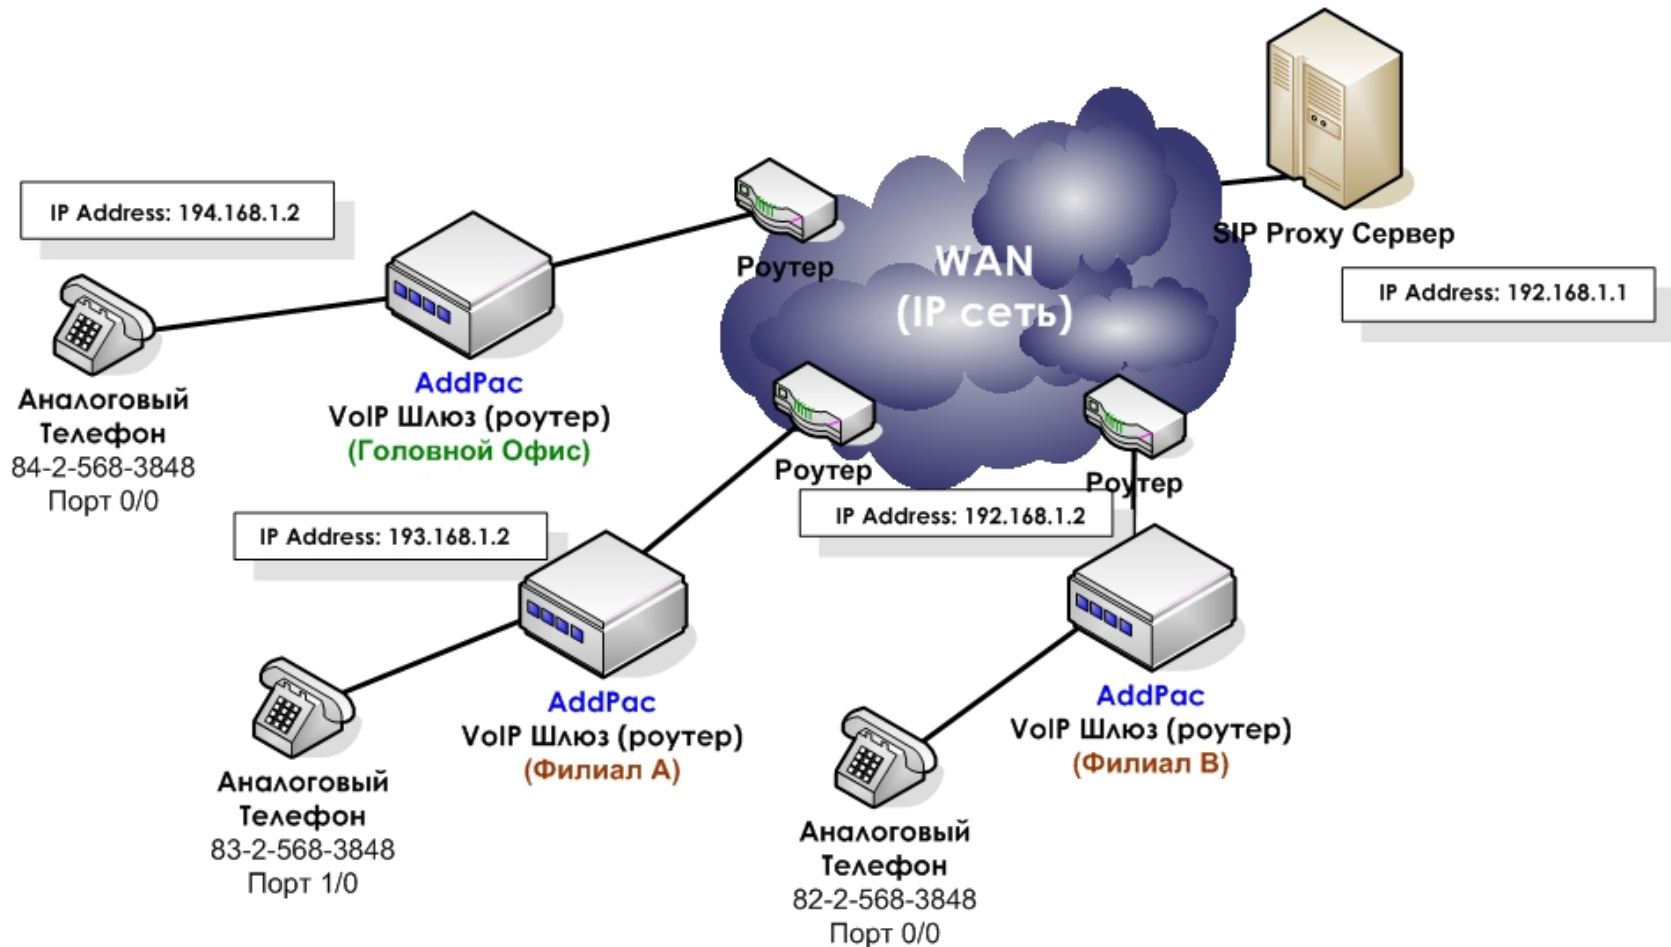

Настройка VoIP интерфейса

- Вызов через SIP Proxy Сервер (2/2) -

Головной Офис

```
hostname HO
interface ether0.0
  ip address 194.168.1.2 255.255.255.0
  !
route 0.0.0.0 0.0.0.0 194.168.1.1
  !
dial-peer voice 0 pots
  destination-pattern 8425683848
  port 0/0
  !
dial-peer voice 1000 voip
  destination-pattern T
  session target sip-server
session protocol sip
dtmf-relay rtp-2833
  !
sip-ua
  sip-username 8225683848
  sip-password AddPac-HO
  sip-server 199.168.1.1
  register e164
```

Филиал А

```
hostname A
interface ether0.0
  ip address 193.168.1.2 255.255.255.0
  !
route 0.0.0.0 0.0.0.0 193.168.1.1
  !
dial-peer voice 0 pots
  destination-pattern 8225683848
  port 0/0
  !
dial-peer voice 1000 voip
  destination-pattern T
  session target sip-server
session protocol sip
dtmf-relay rtp-2833
  !
sip-ua
  sip-username 8425683848
  sip-password AddPac-A
  sip-server 199.168.1.1
  register e164
```